



Magnefusion 3.0 - 4.0 Upgrade Instructions

This Kit Contains:



Magnefusion 4.0 Strap Housing



Magnefusion 3.0/4.0 Custom Stepped Magnet

WHAT IS DIFFERENT BETWEEN 3.0 & 4.0

CURRENT 3.0 STRAP HOUSING



NEW 4.0 STRAP HOUSING (larger diameter)



1. Remove Magnefusion 3.0 Strap Housings



Figure 1

Figure 2

Figure 3

- Insert the small flat-head screwdriver between the Magnefusion 3.0 Strap Housing and the Strap
- Twist the screwdriver 90 degrees to separate the Magnefusion 3.0 Strap Housings and remove the stepped magnet.
- You can reuse the magnet OR if you no longer have the magnet use the one provided in kit.

2. Re-Assemble Magnefusion 4.0 Strap Housings



Figure 1

Figure 2

Figure 3

- Place magnet into housing ensuring correct orientation by securing strap through D-Ring (Figure 6).
- Magnet orientation is determined by D-Ring magnet cover.
- The THINNER Strap Housing should be what touches the D-Ring Housing (Figure 5).
- Once everything is in position be sure the Strap Housing are completely snapped to together and secure.